



## GHOST MOUNT KIT INSTALLATION

---

Ghost Mounts are used for LilliPad Diving Board installation on boats that (1) do not have cross-members impeding the three mounting locations and (2) allow access to the three mounting locations from the bottom side of the boat. If you do not have these two requirements, Ghost Mounts are not the correct mounting selection for your boat. Please contact LilliPad Marine to inquire about the correct mounting kit at 800-279-3419.

---

### TOOLS REQUIRED:

- Drill
  - 5/8" Drill Bit (Clean and Sharp)
  - 7/8" Wrench or Socket
  - #2 Phillips Head Screwdriver
  - Square
  - Utility knife
  - Pen
- 



**VIDEO TUTORIALS**

## QUESTIONS

800-279-3419

## INSTALLATION PROCEDURE:



1. If needed, gain access to the underside of the boat in your proposed mounting location.

*(Remove or lower splash pans or drill 2 1/2" access holes.)*



2. Assemble the stabilizer handle by inserting the top portion of the handle into the lower portion and securing the two parts together (using the screws in the small bag attached to the handle) with a #2 Philips screwdriver.




3. Connect the main frame and the ladder together by inserting the ladder into the two slots in the main frame and pinning the ladder into place.



4. Place the diving board in your predetermined mounting location. Confirm that the frame is perpendicular to the deck using a square, and then confirm the following:

- The three mounting holes on the base of the diving board are NOT over a cross-member or any other below deck intrusions such as wiring.
- The diving platform rests inside of the perimeter of the boat when in the lowered position for safe docking.
- The diving board does not interfere with any deck top fixtures.
- The mounting locations clear the cross-members enough to allow for proper placement of the stamped retaining washer on the bottom side of the flooring surface

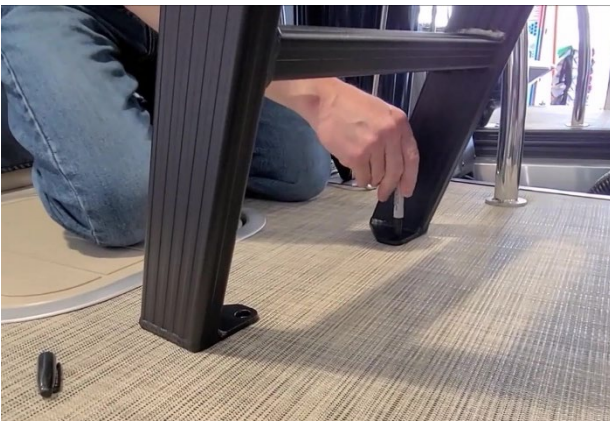

5. Once placement is confirmed, lightly mark the mounting locations on the flooring surface and then remove the diving board from the boat.



6. Drill 5/8" holes, straight-down, in each of the three-mounting locations. Clean up woodchips, above and below deck, to ensure a smooth surface both above and below deck to ensure a clean path for the mounting body.



7. Push the Ghost Mount body into each mounting location. (If your mounting location is close to a cross-member, confirm the proper positioning of the “flats” on the mounting body in relation to the stamped retaining washer that will be placed on the bottom side.)



8. Install the stamped retaining washer (teeth facing up and into the plywood) followed by the flat washer, lock washer, and nut. Tighten the nut to 20 ft/lbs. using a 7/8” wrench or socket. DO NOT use power tools to tighten.




17 inches  
Total width of Diving Board with  
Stabilizer Handrail



38.5 inches  
From Floor to Bottom  
of Diving Platform

24 inches

MOUNTING HARDWARE FOOTPRINT

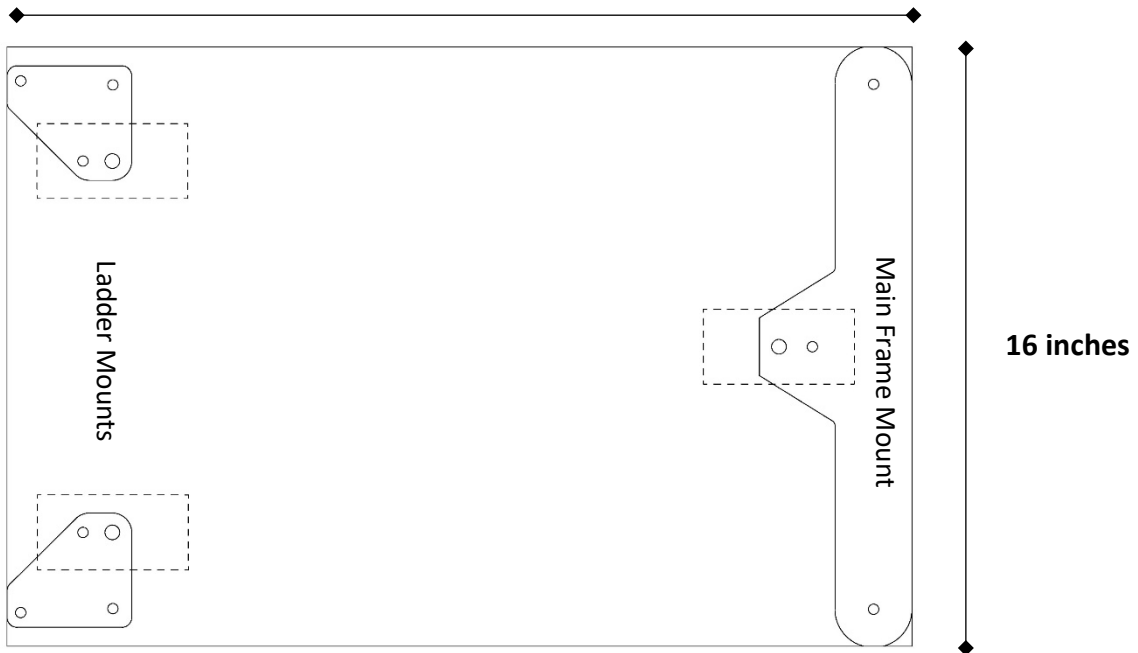

[www.LilliPadMarine.com](http://www.LilliPadMarine.com)

STABILIZER  
HANDLE  
SPACE



**GHOST MOUNTS ARE IN GREEN**

SURFACE OF DIVING BOARD IN LOWERED POSITION

10.00

16.00

24.00

17.75

27.25

9.50

30.00

